

ENR 1.11 ADDRESSING OF FLIGHT PLAN MESSAGES

1 ADDRESSING FLIGHT PLANS

1.1 General

1.1.1 As noted in ENR 1.10, all flight plans should be submitted to the Nadi ATM Centre either in person or telephone or Fax.

1.1.2 The Nadi ATM Centre will address all flight plan messages.

1.1.3 Flight movement messages relating to traffic into or via the Nadi FIR should be addressed in accordance with Table ENR 1.11 – 1 to ensure correct relay and delivery. Flight movement messages in this context comprise flight plan messages, related amendment messages, and flight plan cancellation messages (in accordance with ICAO PANS-ATM, Doc 4444, Part 11.4.2).

Table ENR 1.11 – 1
Addresses for Flight Plan Messages

FIR or Destination Aerodrome	Category of Flight (IFR, VFR, or both)	Message Address
1	2	3
Nadi Oceanic FIR NFFF	All flights	NFFNZQZX
Specified ATS attended aerodrome e.g. NFFN or NFNA	All flights	Specified ICAO location indicator +ZTZX e.g. NFFNZTZX or NFNAZTZX